

Get Bluetooth Address



Scan the bar code above to configure the VoyagerBT to get a Bluetooth address.

- If the next scanned bar code consists of 12 characters, the scanner will remember the code and establish a Bluetooth connection.
- If the bar code scanned is *not* 12 characters, the scanner will ignore the scan and get a Bluetooth address. The bar code will then need to be re-scanned.

Provide Bluetooth Service



Scan the code above to configure the VoyagerBT to act as a server so that other devices using the Bluetooth technology will be able to initiate a connection to the VoyagerBT.

**Sleep Mode (Power Save) Options**

Sleep in 1 Minute



This bar code configures the VoyagerBT to go into *sleep mode* after the laser has been off for 1 minute.

Sleep in 2 Minutes



This bar code configures the VoyagerBT to go into *sleep mode* after the laser has been off for 2 minutes.

Sleep in 5 Minutes



This bar code configures the VoyagerBT to go into *sleep mode* after the laser has been off for 5 minutes.

Sleep in 10 Minutes



This bar code configures the VoyagerBT to go into *sleep mode* after the laser has been off for 10 minutes.

Enable Bluetooth Test



This bar code configures the VoyagerBT cradle to display certain connection information (KO, OK, etc).

**i** Do not enable this feature unless instructed to by a Metrologic representative.

\* Disable Bluetooth Test



This bar code configures the VoyagerBT cradle *not* to display certain connection information (KO, OK, etc).

\* Default Feature

Enable Range Gate



This bar code configures the VoyagerBT to store scanned barcodes into RAM if the Bluetooth connection has been interrupted.

\* Disable Range Gate



This bar code configures the VoyagerBT *not* to store scanned barcodes into RAM if the Bluetooth connection has been interrupted.

 
\* Default Feature

Enable Bluetooth Address Transmission



This bar code configures the VoyagerBT to transmit its Bluetooth address.

Enable Bluetooth Version Transmission



This bar code configures the VoyagerBT to transmit its software version.

**Do not scan the bar code below this line. This bar code is for Metrologic use only.**

This addendum is for use with the 00-02544B, MetroSelect® Single-Line Configuration Guide.

Printed in the USA

September 2003



0 0 - 0 2 0 2 4 A